


WOMACK FOOT STEER INSTALLATION INSTRUCTIONS

EXMARK RADIUS (2023 SERIES E AND 2025 SERIES S)


1. Attach Foot Steer assembly as shown in below photos utilizing the existing holes in ZTR front cross tube cover. Use 6 bolts provided.




2. Attach ball joint ends of the cables to the top tabs on the inside of the pedals. (Photo shows cables attached at center of pedal, but a tab has now been added to the upper inside of the pedal). Attach the cables to the foot steer mounting brackets as shown below.

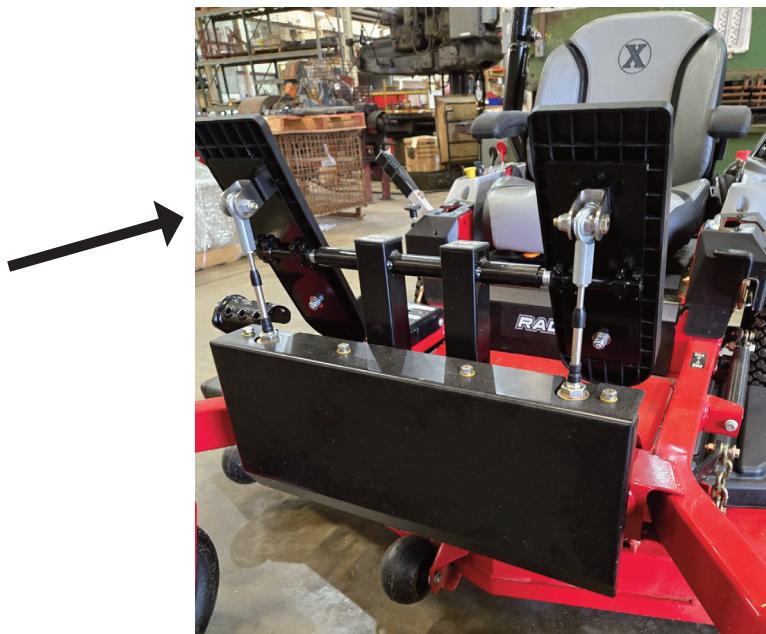

3. Stabilize the mower, lower the mower deck, place on jack stands, and remove the two rear tires. Install the cable mounting brackets to the frame on each side of the machine.

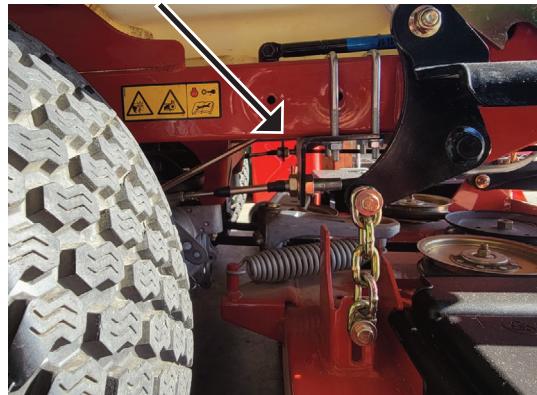


- 4 Feed the cables from front to rear between the mower deck and the frame deck. These cables are a little long, so you will need to cross them a couple of times to accommodate the excess length of the cables.

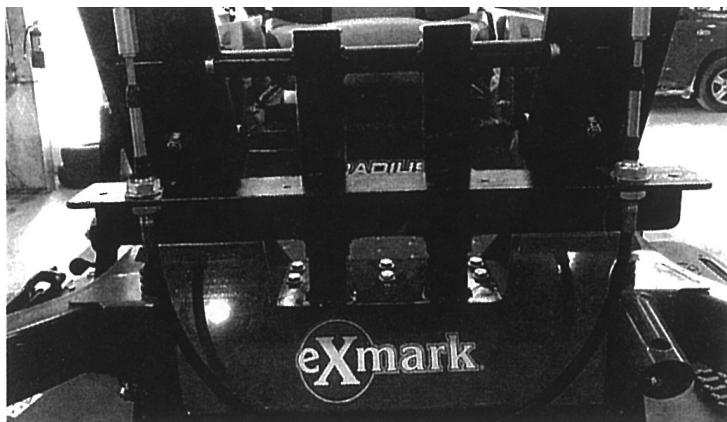

5. Attach the cables to the cable mounting brackets on each side of the mower.



6. Attach the clevis end of the cables to the transaxle control on each side of the mower and adjust the pedals so they slant forward approximately 40 degrees or to a comfortable angle.

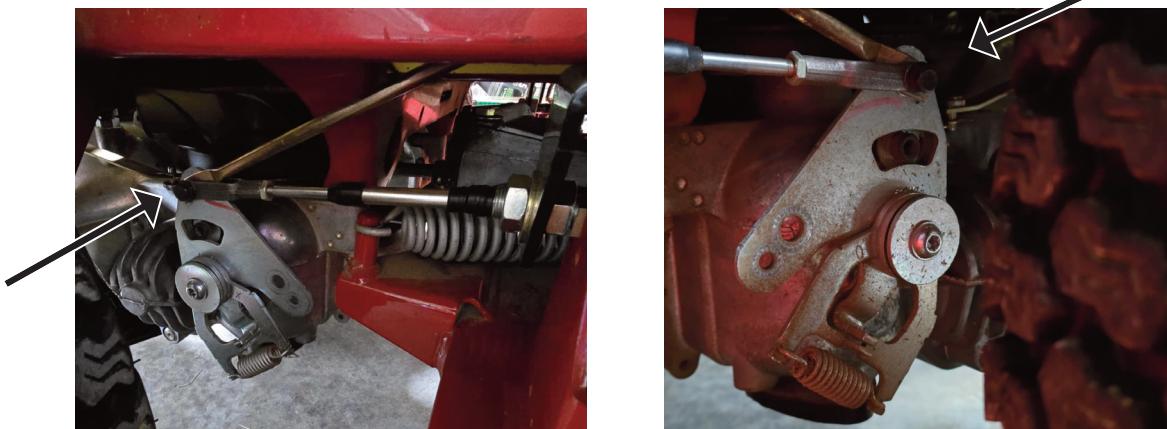

7. Reinstall the tires.

8. Remove the existing handles and replace them with the short handles provided. (Photo number 1). Bolt cable guard to Foot Steer assembly mount. (Photo number 2).

#1



#2



9. All hardware for installation is provided.