

WOMACK FOOT STEER INSTALLATION INSTRUCTIONS

SCAG TIGER CAT II (2025 Model)

All parts and necessary hardware are provided with each Foot Steer unit. The addition of the Foot Steer unit does not modify the mower unit. The mower can continue to be used as it was originally designed. No holes need to be drilled in the ZTR unit for installation of the Foot Steer unit. All safety instructions which apply to the ZTR unit continue to be in effect after attaching the Foot Steer unit.

Installation and maintenance of the Foot Steer unit is the sole responsibility of the owner of the unit and not the manufacturer of the ZTR mower.

1. Remove two 7/16" bolts from upper portion of the front axle cross member.





2. Place the pedal assembly on the front cross member and replace the two bolts, tightening the assembly to the cross member. If not tight, add shim between bottom mount support and front cross member.




3. Bolt the Rear Cable Mounting Brackets (one on each side) of unit through the two bottom holes on each side of the unit.



4. Attach the left and right Center Cable Mount Brackets to the frame tube using the U-Bolts (provided).

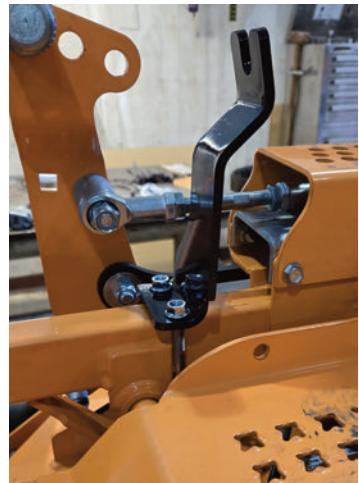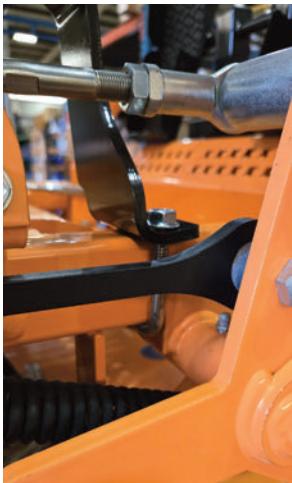

5. Feed the cables through the deck and attach cables to the Center Cable Mount Brackets.

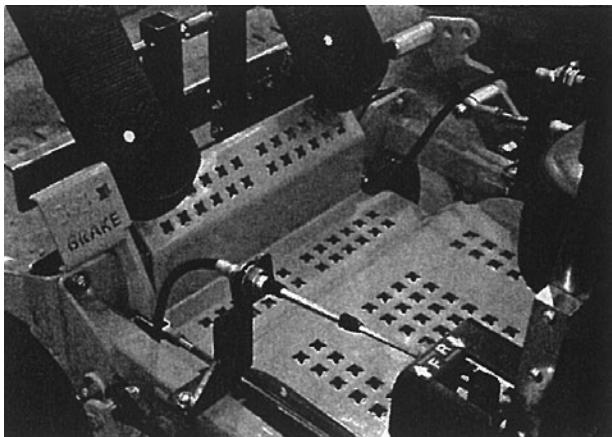

6. Attach cable rod end ball joints to the inside lower attachment tab on lower portion of foot pedals.




7. Attach upper cable ball joints to the Rear Cable Mount Brackets using clevis pins and cotter pins.




8. Lock handles in outside position. Tighten cables at Center Mounting Brackets.

NO PHOTO NEEDED

9. Tighten cables at Front Cable Mounts. These may need to be adjusted when foot pedals are set to the correct angle.

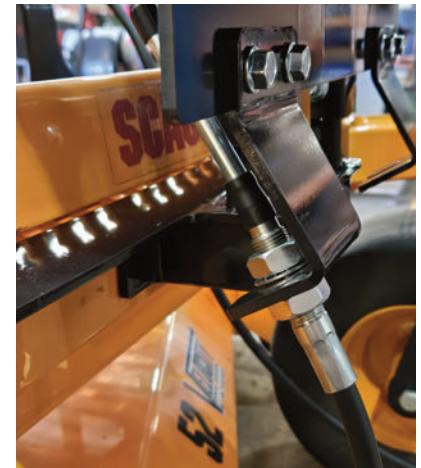

10. Disconnect ball joints from pedals and adjust to approx. 40 degrees from vertical. Reconnect ball joints to pedals. (angle may differ depending on operator's comfort)

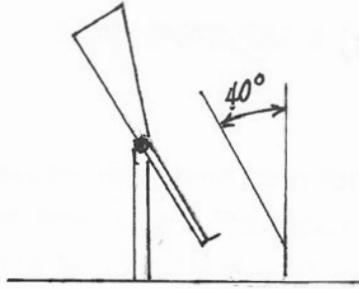

11. Place front cover on foot steer assemble and secure with two bolts into threaded holes.



12. Remove handles from ZTR. Replace with short handles.



This completes the installation of the Womack Foot Steer unit. We recommend a break-in period with your machine to familiarize yourself with the new system of steering. You continue to have the ability to override the Foot Steer function with the handles if you need to rest your legs. Enjoy your new WOMACK FOOT STEER attachment.